USER'S MANUAL

:: REMIX ::

ONLINE MANUAL

english — To acquire a printable version of this manual, please visit v-moda.com/manuals/remix

español — Para adquirir una versión impresa de este manual, visite por favor v-moda.com/manuals/remix

français — Pour obtenir une version imprimable de cette manuel, veuillez consulter v-moda.com/manuals/remix

italiano — Per ottenere una copia stampabile di questa manuale, visitare il sito v-moda.com/manuals/remix

deutsch — Eine Handbuch zum Ausdrucken erhalten Sie unter: v-moda.com/manuals/remix

日本語 — このマニュアルの印刷できる版を得るためには, v-moda.com/ manuals/remixを訪問しなさい

한국어의 — 수 동의 인쇄판을 얻으려면 v-moda.com/manuals/remix 을 방문해 주십시오.

简体中文 — 要获得手工的打印件，请访问 v-moda.com/manuals/remix

中國傳統 — 要獲得本手工之打印件，請訪問 v-moda.com/manuals/remix

:: *helloworld* ::

ROCK SAFELY

Enjoy your music responsibly. According to the American Speech-Language-Hearing Association, “listening to headphones at high volumes for extended periods of time can directly result in lifelong hearing loss”. We at V-MODA are dedicated to providing an enjoyable listening experience, but we also care greatly about your personal health and safety. We recommend that you listen to your headphones at comfortable volume levels for reasonable periods of time.

How to enjoy your music responsibly.

- Turn down the volume. A good point of reference is half volume.
- Limit listening time. Give your hearing a “time out.”

Please visit v-moda.com and ASHA’s Listen To Your Buds™ campaign website at listentoyourbuds.org to learn more about hearing safety.

Be aware of your surroundings. Do not use both earbuds during activities such as driving, bicycling or jogging while on public roads. Many states have laws prohibiting such actions. Obey local laws, be alert, and listen responsibly.

Caution around children. Keep out of reach of children, the parts included with this product can be a choking hazard. This product is not intended for children under 7 years of age.

WELCOME

Welcome to V-MODA, the music lifestyle. We sincerely hope you enjoy our Remix noise-isolating headphones, the pinnacle in sound and quality design. With the essence of music at the foundation of all we do, we've precisely engineered our in-ear headphones to provide an enjoyable and natural sound signature, which invokes the sense of listening to your music live.

Play Hard. Rock Harder.

Included Accessories

1. Headphones
2. Sport earhooks
3. Carrying case
4. Shirt clip
5. 4 sizes of silicone fittings

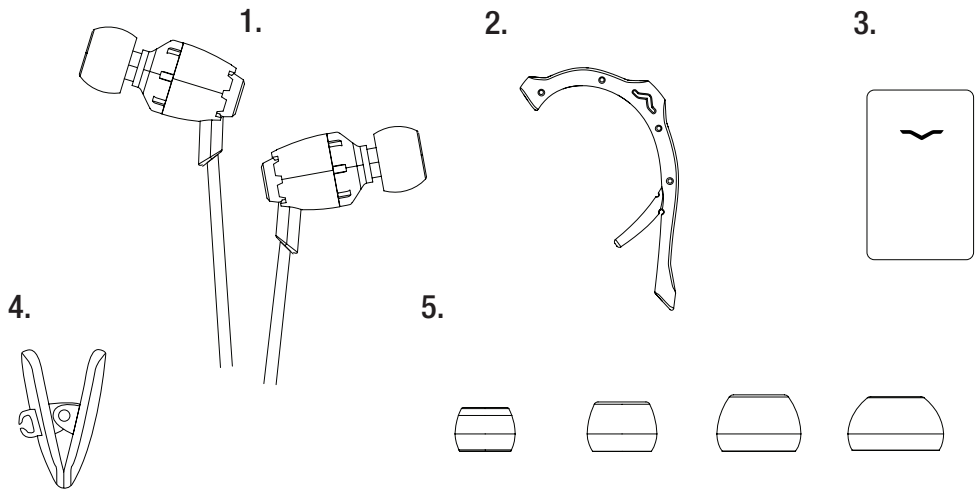

Using Your Headphones

1. Insert silicone fitting onto earbud

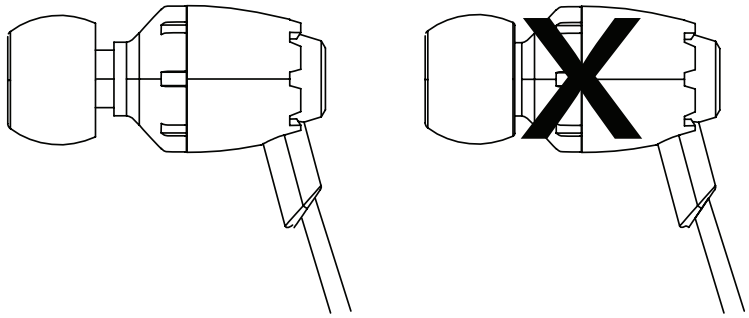

2. Insert earbud in corresponding ear canal (“R” into right ear, “L” into left ear)

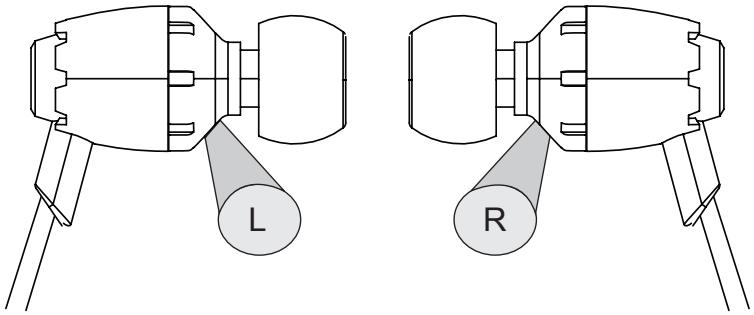

3. Verify the earbud is inserted all the way into your ear, creating a snug fit (similar to an earplug) to ensure highest sound quality and comfort

4. Wear headphones with the cord hanging in front of your head to ensure headphones stay put during strenuous activity

Protecting Your Headphones

- Minimize exposure to moisture. Not intended for use while swimming, bathing or showering
- Use provided carrying case while idle
- Keep headphones clean and free of debris
- **Do not wrap headphones around MP3 player** while still plugged in as it puts unnecessary pressure on plug-cord connection

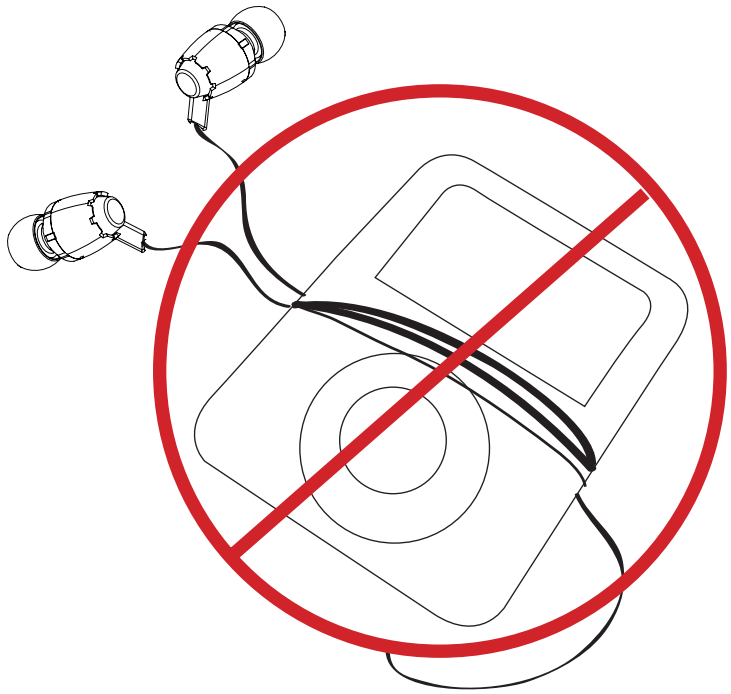

Optimum Clarity

For improved clarity, clip the microphone control closer to your neckline

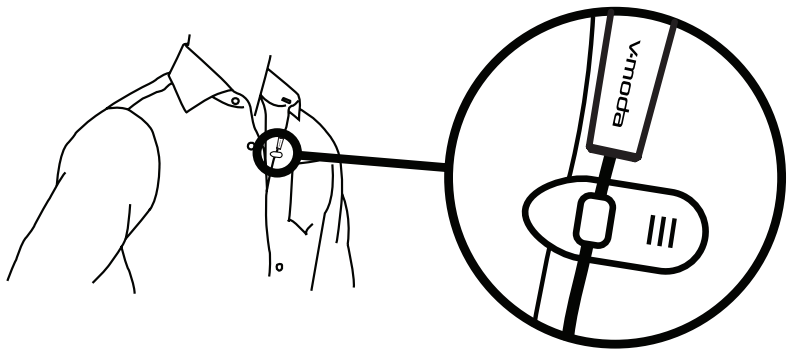

Using Your Sport Earhooks

To provide additional stability and minimize cable noise, please use the included sport earhooks, featuring Active Flex™ technology. The independent suspension allows the earbud seal to remain intact and maintain the integrity of sound while flexing with every movement.

1. Start with earbud hanging about one inch below top of sport earhook (the curved end). Insert headphone cable into exterior hooks, starting at the top hook moving downward towards bottom hook.

2. Secure on ear by wrapping top of sport earhook around the top of your ear with the bottom pointing towards your shoulder. Then insert earbud into your ear.

3. Sport earhooks provide ultimate stability and minimize cable noise during even the most vigorous use.

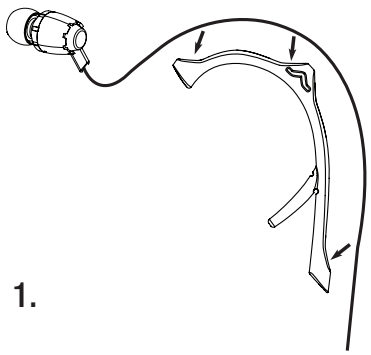

1.

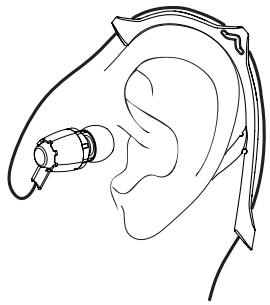

2.

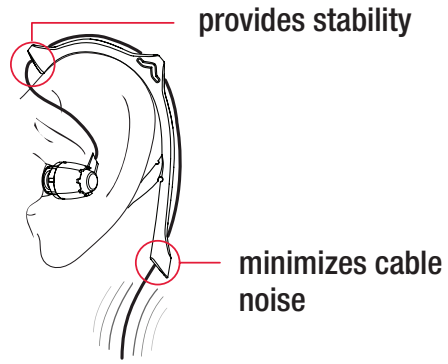

3.

Using Remix Call/Music Control* Feature (for Vocal and Remote models only)

1. During music playback
    - Click button** once to pause and again to resume playback
    - Click button twice quickly to track forward
    - Click button three times quickly to track backward
2. During calls
    - Click button once to answer incoming call, click once to end call
    - Press and hold button down for about two seconds to decline an incoming call
    - Click button once to switch over to call waiting, click again to switch back to original call

Audio Compatible: *with the iPod®, iPhone®, iPad™, CD, MP3, portable gaming, computers and devices with a 3.5mm audio port.*

** **Mic + call control compatible** with any iPhone and all phones with a 3.5mm port, results may vary.*

*** **For Remix Remote,** please press CENTER button.*

Using Remix 3 Button Remote*** Control Feature (for Remote model only)

1. Increase volume
    - Press top button. Press and hold top button to increase volume quickly
2. Decrease volume
    - Press bottom button. Press and hold bottom button to decrease volume quickly

**** **Remote and mic** are supported only by iPod nano® (4th and 5th generation), iPod classic® (120GB, 160GB only), iPod touch® (2nd and 3rd generation), iPhone 3GS, iPhone 4 and iPad, results may vary. The remote is supported by iPod shuffle® (3rd generation).*

Troubleshooting

If you are experiencing trouble with your Remix headphones, please refer to the troubleshooting guidelines below. If the problem persists, please contact the V-MODA customer service department at v-moda.com/support or 1.888.VMODA.LA.

Trouble	Suggestions
No audio	Make certain the audio device's headphone jack is free of debris and that the headphone plug is securely connected.
Lack of or excessive bass or treble	Turn off any audio enhancement features on audio device. Ensure proper fitting is being used.
One earphone is quieter than the other	Remove silicone fitting and briskly blow into the earpiece. (It is possible there is debris inside housing, lodging sound driver in place.) NOTE: do not put your mouth around earbud.
Distorted sound	Check to make sure the problem is not with the audio device or the file which you are listening to. Ensure the EQ settings on the device are set properly. Make certain proper fitting is being used and that you have a snug fit (similar to that of an ear plug) and that the driver is pointed directly towards the ear canal.

Cleaning Your Headphones

To keep your headphones clean, periodically remove the silicone fitting and wipe earpiece with a dry cloth. Replace silicone fitting when done.

Replacement Accessories

Replacement silicone fittings, sport earhooks, shirt clip and carrying case may be ordered at **shop.v-moda.com**.

Note on Static Electricity

In particularly dry air conditions, mild tingling may be felt on your ears. This is a result of static electricity accumulated in the body, and not a malfunction of the headphones. Wearing clothes made from natural materials can minimize the effect.

Hearing Safety

The Occupational Safety Health Administration has developed the following noise exposure chart to help determine what levels and lengths of listening are safe.

Sound Level dBA	Maximum Listening Duration
90	8 hrs
92	6 hrs
95	3 hrs
100	2 hrs
102	1 ½ hrs
105	1 hr
110	½ hr
115	¼ hr or less

V-MODA Premier Limited Warranty

V-MODA warrants the owner of the Remix product against defects in materials or workmanship as declared below:

- V-MODA will repair or replace the Remix product at no charge for two (2) years from the date of purchase.
- Products must be purchased from a V-MODA authorized dealer.
- After the warranty period, or in cases where the Premier Limited Warranty does not apply, the consumer may contact V-MODA customer service to request 50% off a replacement V-MODA headset* (see next page). This warranty does not cover shipping, installation and removal of any other costs. Proof of purchase may be required and should be retained.
- This Premier Limited Warranty does not cover cosmetic damage, acts of God, misuse, accidents, commercial use, and modification to the product, improper connection, improper use or attempted repair by unauthorized distributors renders this warranty null and void. * (see next page)
- This warranty does not cover products purchased open box, sold as-is, by private party resale or any other third party purchases from unauthorized distributors. Transfer of V-MODA products through unauthorized distributors renders this warranty null and void.
- A proof of purchase may be in the form of a receipt or bill of sale, with the model of the product, price and the date of purchase stated.

Restrictions

V-MODA is not responsible to repair or replace the product if in violation of this warranty. This warranty gives the purchaser specific legal rights, you may also have other rights which vary from state to state that may result in the change of this warranty. *

To obtain service under this warranty agreement, properly protect the product in a shipping package, as we are not responsible for items lost or damaged in transit, and include a copy of the original receipt.

Please visit v-moda.com/support for further instructions, in order to fill out the online warranty form and for the current V-MODA warranty mail stop mailing address.

To acquire a printable version of this warranty, please visit **v-moda.com/support**. For customer service inquiries, please e-mail **support@v-moda.com**. You may also call **1.888.VMODA.LA** Monday through Friday, 9:00 am to 5:00 pm (PST).

V-MODA SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE WARRANTY PERIOD FROM THE DATE OF ORIGINAL PURCHASE. *

* V-MODA Replay Replacement Program - 50% off lifetime discount

Does the V-MODA Premier Limited Warranty not cover your V-MODA headphones?
No reason to worry! V-MODA's Replay Replacement Program - 50% off lifetime discount policy offers 50% off towards any V-MODA in-ear headphone replacement purchase on www.vmoda.com regardless of how they broke. Dropped, drove over them with your car, snagged in the elliptical machine, anything.

(continue on page 11)

Contact support@v-moda.com or call 1.888.VMODA.LA, Monday through Friday, 9:00 am to 5:00 pm (PST), to inquire how to get your coupon. Send us the original headphones for replacement and the model number of your replacement preference and we will electronically send you a 50% off coupon towards your future headphone purchase.

©2010 V-MODA, LC. All rights reserved. V-MODA, the V-MODA logo, and Remix are all trademarks of V-MODA, LC.
"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
iPad is a trademark of Apple Inc.

Designed by V-MODA in Hollywood, California. Assembled in China. Patent Pending

RoHS Compliant

PAUSE ⏸

PLEASE DO NOT
RETURN TO RETAILER

For any defective issues relating to your V-MODA product please contact our Customer Concierge directly.

:: visit ::
v-moda.com/support
:: email ::
support@v-moda.com
:: or call ::
888.VMODALA

NOW PLAY ▶